


(1) Loosen the three M3 screws with included H1.5 wrench

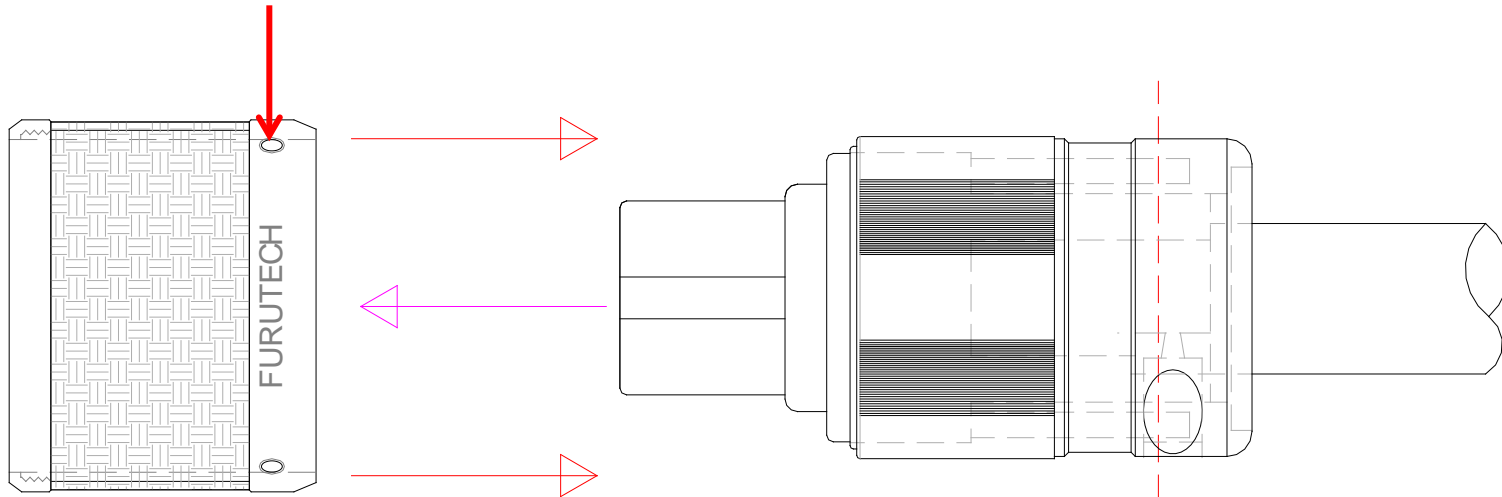

(2) Insert the connector into the suppressor until it reaches the red line (suggested)

(3) After inserting into the suppressor, evenly tighten the three M3 screws until secure

The Suppressor CF-080 Assembly Explanation